

Sheer


Radiance
Installation Instructions

Congratulations on the purchase of your new Sheer Radiance Vertical Sheers. The unique design of Sheer Radiance affords the elegance of fine seamless translucent fabrics with the control and benefits of vertical blinds.

INSTALLATION INSTRUCTIONS

OUTSIDE MOUNT


1

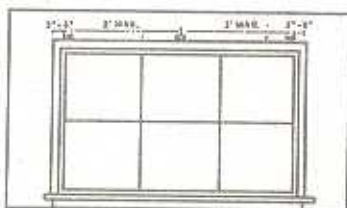

MOUNTING BRACKETS for headrail 3" to 5" from where each end of headrail will be. Brackets should be placed 1 per every 30 inches when installing. All hardware brackets will be attached to headrail excluding large orders. Which will be in a separate parts box.

For Inside Mount See Below

2

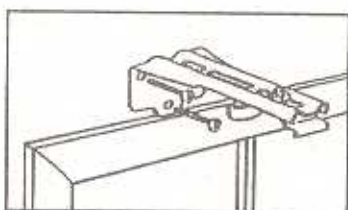


Proper height for top of bracket is at point where original ordering measurements were made. If in doubt, add 1/2" to blind length to allow clearance above floor or 1/4" for clearance above sill, as appropriate. Otherwise blind length should extend 3" below sill.

Mount brackets at intervals determined in step 1.

For Inside Mount See Below

3

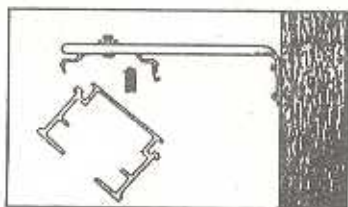


INSTALL TRACK: Rotate track into clip until it snaps in place.

INSIDE MOUNT

Add these steps in place of #2 & #3 above for inside mount


2

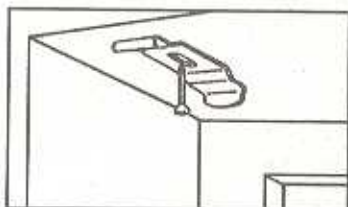

FOR INSIDE OR CEILING MOUNT WITHOUT VALANCE: Drill holes for installation clips into top of casing or into ceiling a minimum of 2 1/8" from window frame at intervals determined in step 1.

Vane Installation


To Hang the Vanes for 1-Way Traverse Draw

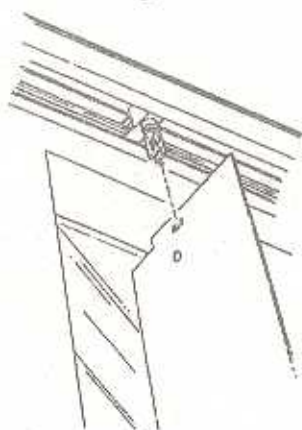

1. Using the draw cord, traverse the carrier clips across the headrail.
2. Rotate the carrier clips to the open position using the nylon tilt chain. (Your blind must be tilted to the open position BEFORE you clip in the vanes).
3. Push each vane with the notch in the back towards the window into the carrier clips until they snap into place.


To Hang the Vanes for Split Draw

1. Using the draw cord, traverse the carrier clips on the headrail to show the opening in the center.
2. Rotate the carrier clips to the open position using the nylon tilt chain. (Your blind must be tilted to the open position BEFORE you clip in the vanes.)

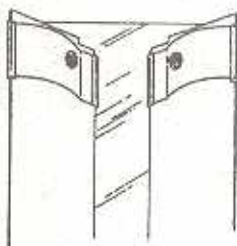

3. Install the two center vanes first. They will have a notch in the back and a "bubble" on the side. The vane with the male snap on the front of the bubble is on the right side of the split and the vane with the female snap on the front of the bubble is on the left side of the split.

4. Hang the remaining vanes by pushing each vane with the notch in the back into the carrier clips until they snap into place.

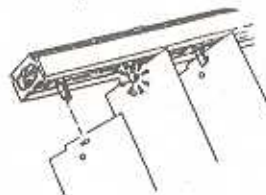

NOTE: Upon installation, vanes may have static electricity built up causing the vanes to "latch" onto or stick to one another. Simply use a dryer sheet or a damp cloth and mild detergent to wipe down the vanes and remove the static.


Sheer Drapery

Unpacking the Sheer Drapery

NOTE: Your Sheer Drapery is securely wrapped in plastic. Take special care not to damage the sheer fabric when opening the plastic.


It is recommended that you wash your hands and have a clean work area before installing your Sheer Drapery.

Sheer Drapery Installation for 1-WAY TRAVERSE DRAW

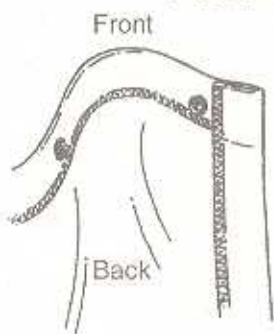


1. To keep from damaging your Sheer Drapery during installation, gather the fabric and place it over your shoulder.

2. To attach the Sheer Drapery to the vinyl vanes, begin with the first vane on either side of the blind. Locate the first snap pocket of the Sheer Drapery. With the snap open, fold the Sheer Drapery around the top of the vane and reconnect the snap at the back through the hole in the plastic vane.

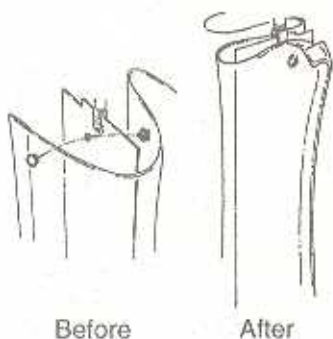


3. Continue the same process for the rest of the vanes.

4. There are special pockets at each end of the Sheer Drapery. Insert the top and the bottom of each end of the vanes into these pockets and then pull the fabric around the vane.

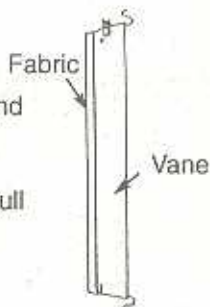


5. To complete the Sheer Drapery installation, insert the bottom of each vane into its associated fold. The vane will rest between the fabric folds and be held in place by a string connector. For ease of installation, bend each vane just enough to slide the slit in the bottom of the vane over the string connector.

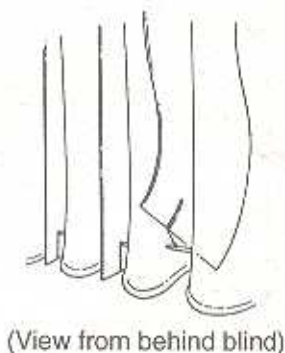


(View from behind blind)

Sheer Drapery Installation for SPLIT DRAW

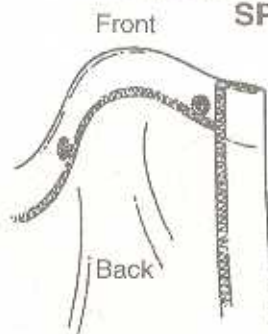

1. To keep from damaging your Sheer Drapery during installation, gather the fabric and place it over your shoulder.

2. To attach the Sheer Drapery to the vanes, begin with the center vane on the right side of the blind. Locate the first snap on the right side of the drapery. Snap the sheer onto the face of the vane, then fold the sheer around the top of the vane and snap the second half of it to the opposite side of the vane.

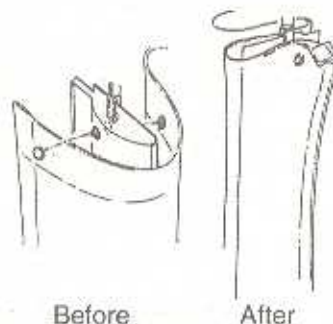


3. For the rest of the vanes, fold the sheer around the top of the vane and reconnect the snap at the back through the hole in the plastic vane.




Repeat steps 2 and 3 for the left side.

4. There are special pockets at each end of the Sheer Drapery. Insert the top and the bottom of each end of the vanes into these pockets and then pull the fabric around the vane.

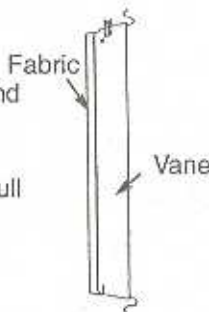

5. To complete the Sheer Drapery installation, insert the bottom of each vane into its associated fold. The vane will rest between the fabric folds and be held in place by a string connector. For ease of installation, bend each vane just enough to slide the slit in the bottom of the vane over the string connector.

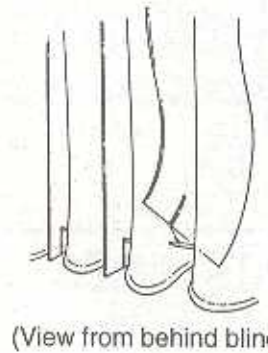

(View from behind blind)

Final Inspection

It is important to ensure all vanes are seated properly in their respective drapery pockets and locked securely into the carrier clips on the headrail. You can check this by ensuring the drapery pockets are all at the same height and the bottom of the drapery is parallel with the floor or sill. Test to make sure the vanes rotate, close and draw correctly. If not, refer to the section "Vane Installation" to ensure the vanes have been installed correctly.

Minor wrinkles in the Sheer Drapery should hang out over the next 1 to 2 days. For persistent wrinkles, a professional hand steamer may be used:

- Be careful not to hold the steamer too close to the blind as it may warp the vanes.
- Steam should be applied onto the front and back of the sheer to softly smooth out wrinkles.

SHEER VERTICAL OPERATION

To rotate the vanes, pull down on the nylon tilt chain.

To traverse the vanes across the headrail, make sure the vanes are tilted to the open position and then pull the draw cord.

WARNING: Traversing the vanes in the closed position may cause them to overlap incorrectly. Attempting to rotate vanes that are not overlapped properly will cause damage to your blind. If the nylon tilt chain does not rotate easily, check each vane to make sure they are all overlapped the same direction.

Care and Cleaning

Clean using a damp white cloth and mild soap. Rub a dryer sheet along both sides of each vane to help reduce static electricity.

The sheer drapery can be feather dusted or vacuumed at a low suction setting to remove dust.

The sheer drapery can also be removed from the vanes and washed following these simple instructions:

- Set the washing machine to the gentle cycle and place the sheer drapery inside. Using warm water and mild laundry detergent, wash the sheer.
- Immediately following the spin cycle, remove the sheer while it is still damp and re-install it on the vanes until dry. Place some towels under the vanes to prevent flooring from becoming wet.
- DO NOT machine dry or iron the sheer fabric. Steaming will effectively remove any wrinkles. (See "Final Inspection").

SHEER VERTICAL REMOVAL

1. To remove the sheer, unsnap all the snaps and take the vanes carefully out of the folds in the fabric and off the string connector at the bottom.
2. To remove the vanes, push the vane up to release the carrier clip and gently pull the vane toward you.
3. To remove the headrail, push up on the tail of each mounting clip to release the headrail from the brackets. (See "Outside Mount" or "Inside Mount")



WARRANTY

Sheer Radiance is covered by a 5 year warranty. This limited warranty protects the original purchaser against manufactured defects in material or workmanship. It does not cover damages caused by accidents, misuse or improper installation. All fabrics are warranted for 5 years for color fastness and dimensional stability.

CUSTOMER SERVICE HOTLINE
1-765-884-3265