BRACKET INSTALLATION

Shades are shipped with the required number of brackets for proper installation. End brackets should be located with centerlines 2" in from each end. Depending on the width of the shade, additional brackets may be necessary—evenly spaced between the two end brackets.

	Use this number
For shade widths of:	of brackets:
Up to 40"	2
40" to 72"	3
72" to 84"	4
84" and up	5


Using the installation bracket as a template, measure and mark the center lines. When mounting brackets, make sure they are in line and level.

On shades 84" to 96" wide it is recommended to use a second bracket located next to the end bracket at the Cord Lock. INSIDE MOUNT

The brackets are mounted flat against the top sill surface. Place the bugle head screw through the hole closest to the front of the bracket. To fully recess the shade requires a flat surface with a minimum depth of 1 3/4". Shallow mounting requires 1/2" minimum.

HONEYCOMB STANDARD RECTANGULAR SHADES

INSTALLATION INSTRUCTIONS

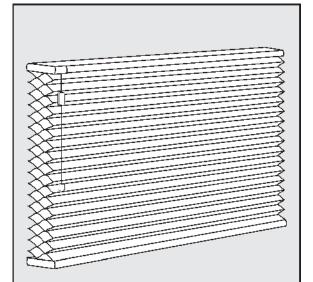



Our window fashions represent a design breakthrough in style, efficiency and function. Our Cellular shades feature 100% non-woven polyester fabric providing a soft diffused light and high level of privacy. The unique hardware system is designed to provide years of reliable service when properly installed. Please take a few minutes to read through these instructions before beginning.


BASICS

- A few simple tools are required:
- ■Measuring tape
- ■Power drill, drill bits
- Hex head and/or Phillips driver bit
- ■Pencil

Additional fasteners other than those sent with your shade may be required depending on the mounting surface. Wallboard and plaster require the use of anchors such as expansion or toggle bolts. Brick, tile or stone need special plugs and drill bits. Remember to always pre-drill holes in wood to avoid splitting.

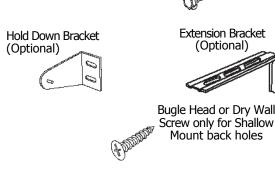

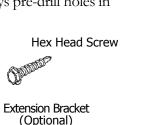


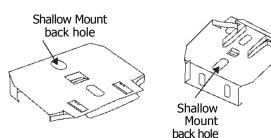

2" Cord Lock


1st Installation

Our Honeycomb shades are constructed to be hung as either an inside mount or an outside mount. The installation bracket can be mounted inside the window opening, for an inside mount, or on the molding or wall above the window for an outside mount. The extension bracket and the hold down bracket are optional items requested at the time of ordering the shade. The extension bracket provides projection of the installation bracket in order to clear obstructions. The hold down bracket keeps the shade from swaying and is often used for installation on door windows.

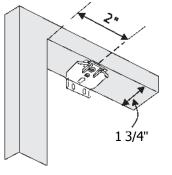


OUTSIDE MOUNT

The brackets are mounted with two bugle head screws through the back end of the bracket flat against the window molding or the wall above the window. The bracket requires a minimum surface 3/4" high.

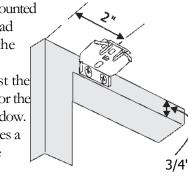

SIDE MOUNT

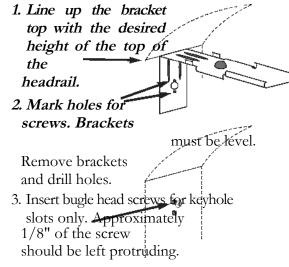

frame, using the keyhole slot. Bring the other end bracket over the screw at the other side of the frame. Slide down, flexing bracket inward until the screw engages in the keyhole slot. **OPTIONAL EXTENSION BRACKETS**

Optional extension brackets are used to project the back of the shade up to 2 3/8" from the mounting surface. Attach the installation bracket to the extension bracket with the nut and bolt provided.

Unwind the cord from the shade but keep the rubber band around the shade stack.

1.Hold the shade up near the brackets and insert the

front clip of the bracket into the front groove of the rail.

2. Make sure the shade is centered in the window opening.

 Push the rail back and up until the back clips of the bracket are inserted in the back groove of the rail.
To remove shade, reverse procedure.


Nut

3

Bolt

Extension

Bracket




2' minim um

OPTIONAL HOLD DOWN BRACKET

Optional hold down brackets are mounted with the supplied screws. With the shade at its proper drop, place the pin of each hold down into the hole in each end cap and mark the s c r e w h o l e s . M a k e s u r e the pins are level and aligned. Raise the shade, then screw the hold down bracket into the mounting surface.

CORDLOCK OPERATION

To lower or release shade, pull the cord inward toward the center of the shade. To raise or lock shade, pull the cord straight down and outward toward the edge of the shade

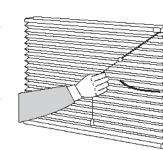

edge of the shade.

PROTECT YOUR CHILDREN

Be aware that it is possible for children to strangle in window covering cords. To reduce the occurrence of accident, all cords must be kept out of the reach of children, including infants. Cord cleats are an effective way to implement this essential precaution. Mount the cord cleat at a safe height, taking into account furniture or other objects upon which a child may climb. Then, after each use of the shade, simply wrap the excess cord around the cleat. It's fast, easy and safe. To protect your children, we are pleased to provide cord cleats free of charge with every shade that we manufacture.

CLEANING AND CARE

The shade fabric is easy to care for. Regular dusting with a feather duster or vacuum cleaner brush is recommended. Most stains can be blotted with a damp sponge and mild detergent. For problem stains, the shade can be removed from the Installation brackets and soaked in warm water. When damp, raise shade tightly to re-crisp pleats. Before using anything stronger than mild detergent and lukewarm water, test an unobtrusive corner of the shade. If you have any questions, call your dealer for advice.